

# Strip Curtains

## INSTALLATION & OWNERS MANUAL

PACKED BY:	DATE: / /
INSTALLED BY:	DATE: / /


*(Please leave with owners when finished)*

### Installation

For installation of your Flexible P.V.C. Strips please follow the simple directions below.

Before commencing, always check the opening is square, door heads and floors are level, walls are parallel, etc. Building trade skills may be necessary to compensate for discrepancies.

Tru-Bilt's versatile mounting tracks can be installed in two ways, as illustrated below:

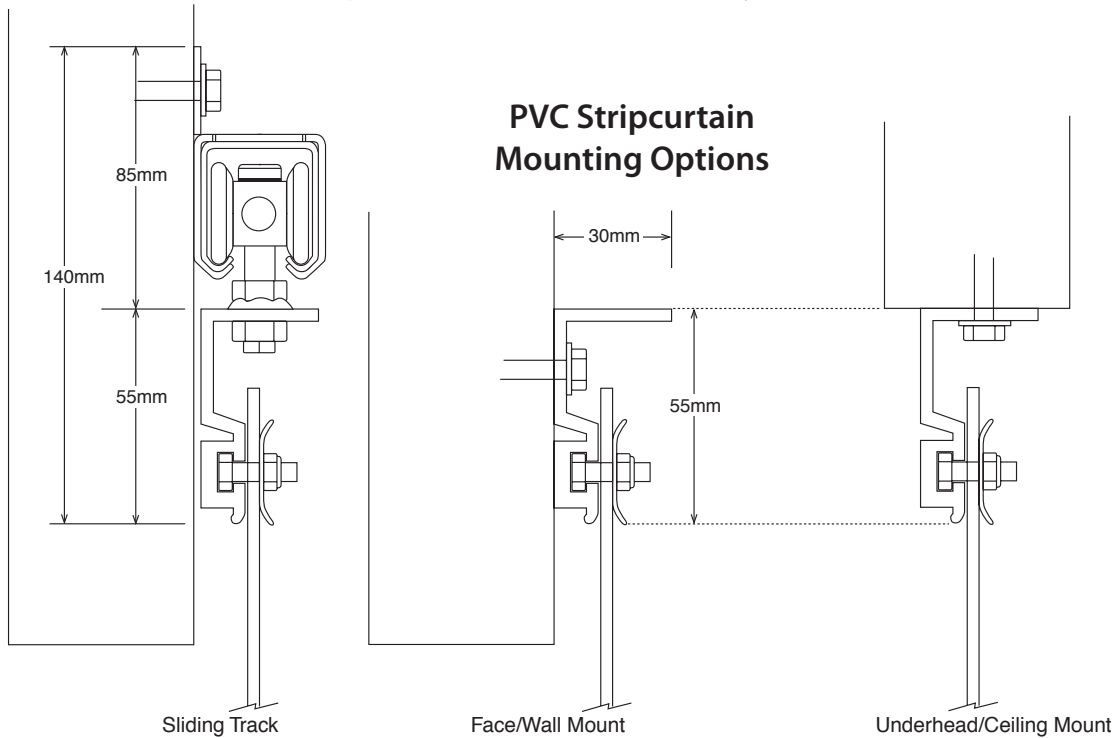

### Recommended Strip to Floor Clearance

Personnel Traffic only	5-10mm
Small Trolleys and Pallet Trucks	10-15mm
Forklift and heavy duty applications	20mm+

FOR COOLROOM AND FREEZER APPLICATIONS, PLEASE NOTE: STRIPS CAN SHRINK SLIGHTLY WHEN BROUGHT DOWN TO TEMPERATURE.

**TBI TRU-BILT INDUSTRIES**  
 THE DOCK AND DOOR COMPANY THAT CARES

### **FACE MOUNTING** (Through the back of the track)

- Track is normally supplied to a precut length, equal to the coverage of the strips supplied.
- Strips normally lap over both sides of the opening.
- Before fixing our mounting track, hold it above your opening in a position where you can obtain a secure fixing.
- Hold one strip against the track and check for correct clearance at the bottom of the strip. (refer to page 1)
- If necessary, strips can be trimmed to length using a sharp knife to achieve the recommended clearance.
- Centre the mounting track over the opening and fasten the track securely to your mounting face, using fasteners of suitable strength.

### **UNDERHEAD MOUNTING** (Through the top of the track)


- Fix the mounting track using suitable fasteners under the head of the opening, allowing sufficient clearance at one end, to slide the bolt heads into the keyway of the track.
- If end clearance is not obtainable, the required number of bolts must be slid into the track before fixing into place.
- If necessary strips can be trimmed to length using a sharp knife, to achieve the recommended clearance. (refer to page 1)

### **HANGING STRIPS**

- Slide bolts supplied into the track keyway and space bolts evenly over the track width.
- Starting flush with one end of the track, work your way across hanging Strips in the following pattern:

Hang strip 1; then Strip 3; go back and hang Strip 2; then hang Strip 5; followed by Strip 4; Strip 7; then Strip 6, etc.

This ensures that Strips lap correctly as shown in the diagrams below.

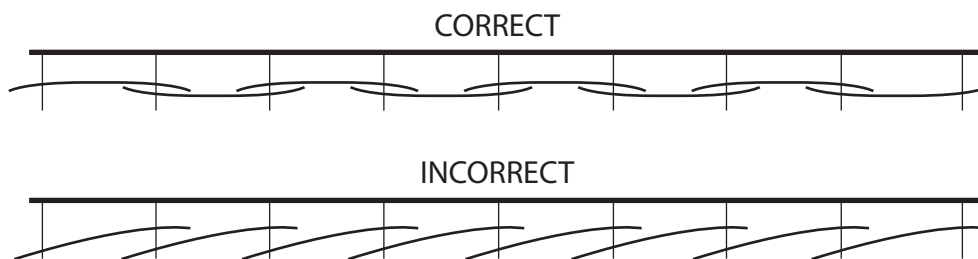

- Place washers supplied under the Nyloc nuts and tighten firmly.
- DO NOT over-tighten.

NB: STRIPS CAN TAKE SEVERAL DAYS TO HANG TRUE.

For further advice, do not hesitate to call us on our Free Phone 0800 144 999.

## **AREA AGENT**

### **TRU-BILT INDUSTRIES LTD**

586 Kaikorai Valley Road, Dunedin, 9001, New Zealand

Phone: +64 3 488 2060 • Fax +64 3 488 2061